

**FRQ:**

**Question 1: After installing, Why don't the light doesn't shine when we use hands cover sensor head ?**

A: In the daylight, when you use hands cover sensor head, the light will not open, because the sensor head sensor range is wider than the human eye, the amount of infrared light during the day through the finger, can also be sensor induction.

Solution: Please cover with a black cloth or multi-layer paper towel.

**Question 2: Why the head light need to wait 10 seconds to open after we turn on the key?**

A: The module will detect the battery voltage of the car. If the voltage of your battery is insufficient, it will be delayed up to 15 seconds. If you fire right away, the module will turn on within 2-3 seconds, which is the battery protection function of the module.

**Question 3: Why is my leaving and coming function is not valid?**

A: The possible reasons: 1. The ambient light is good; 2. Headlight switch is not in the AUTO position; 3. From the home function is turned off; 4. Fuse burned; 5. Your car does not support from the home function; Do not need this function, you can press the manual to close.

**Question 4: Why is not the day wide black light on the show**

A: This is the characteristics of automatic headlights, the default setting of the module for the segment on the lights, the sky is slightly dark to open wide lights, which will help traffic safety, it is necessary. You set a little later to open wide lights, and with the closure of tunnel mode, so that the wide lights will be opened later. But still may be earlier than you turn on the light habits. I hope you can develop next to the early next morning to show wide lights, morning lights off the good customs, thank you.