


Removing and installing coolant temperature sender -G62-


Removing

Proceed as follows:

- Engine cold.
- Detach bonnet → Chapter.
- Open filler cap -arrow- on coolant expansion tank briefly to relieve residual pressure in cooling system.

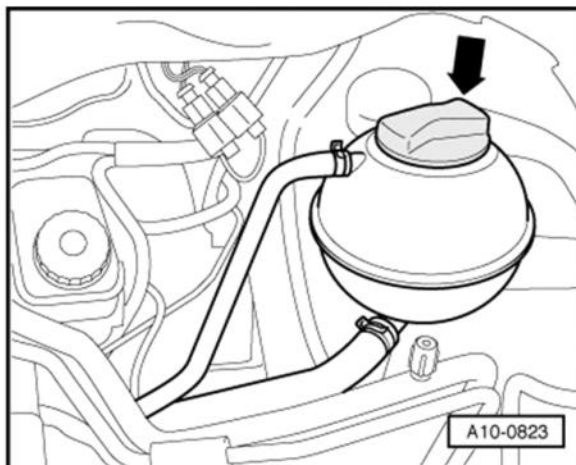

- Detach water collector -1- and move clear to one side (drain hose -2- remains connected).

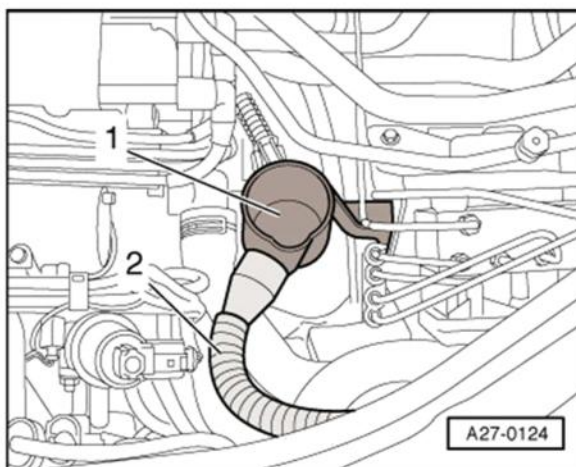

- Unplug electrical connector -1- at coolant temperature sender -G62-.



Note

Place a cloth underneath to catch escaping coolant.

- Pull off retaining clip -2- and detach coolant temperature sender -G62-.

Installing

Installation is carried out in the reverse order; note the following:



Note

- ♦ Renew gasket and O-ring.
- ♦ Insert new coolant temperature sender -

G62- immediately into connection to avoid loss of coolant.

- Check coolant level → **Anchor**.

