


Removing and installing coolant pump

Special tools and workshop equipment required

- ♦ Drip tray for workshop hoist -VAS 6208-


VAS 6208

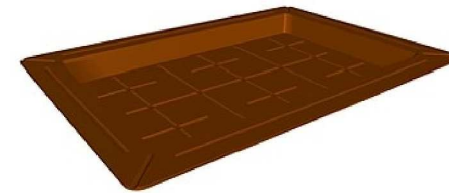

W00-11209

Removing

- Drain coolant → Chapter „Draining and filling cooling system“.
- Remove main drive toothed belt → Chapter „Removing and installing main drive toothed belt“.
- Remove bolt -arrow- and detach idler roller -1-.

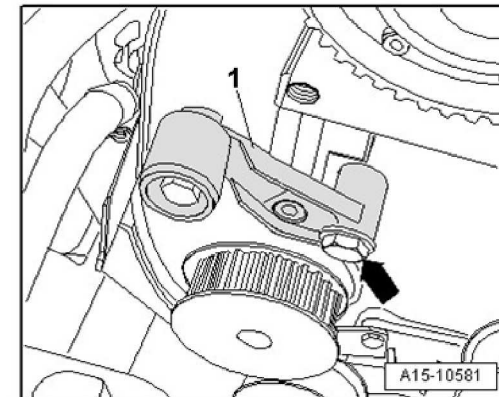

- Remove bolts -arrows- and remove rear cover -1- for toothed belt.
- Place drip tray for workshop hoist -VAS 6208- beneath engine.
- Detach coolant pump.

Installing

Installation is carried out in the reverse order; note the following:

- Install idler roller for main drive toothed belt → Chapter „Toothed belt drive - exploded view“.
- Install main drive toothed belt → Chapter „Removing and installing main drive toothed belt“.
- Fill up with coolant → Anchor.

